



# Jiaying Baichuan Printer Technology Co.,Ltd

Add: NO.51Huixin Road.Huimin Industrial Zone.Jiashan.Zhejiang Province.China

Post: 314112 Tel:86-573-84641239 Fax:86-573-84641257

www.inks.com.cn Email: sale@inks.com.cn MSN: bcinks@hotmail.com

## Products List

### Item1-----Specific Dye Ink For EPSON Desktop & LFP Printers (DYE)

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
ED-3A	8	06	31	03	C	T037/T039/T058/ T041/T018/T029	For Epson stylus C42UX/CX1500/C41UX/C43UX/C45/ME 100/ME 1/ 777/ 777/ 680/685/1000ICS/ C60/C61/CX3100/C50/ C62/CX3200
	8	06	31	02	M		
	8	06	31	01	Y		
ED-3B	8	06	32	03	C	T0472/T0442	For Epson stylus C63/CX6300/C65/CX3500CX6500/C64/C66/C84/ C86/CX3400/CX6400/CX6600//CX3500/C83
	8	06	32	02	M	T0473/T0443	
	8	06	32	01	Y	T0474/T0444	
ED-3C	8	06	33	03	C	S020036/S020049/S020089/S020191/S020138/S020097/T014/T020/T005	For Epson Stylus Color740/760/800/850/850N/850Ne/860/1160/1520/400/440/ 600/640/660/670 Color300/200/500/480/450/C20/C40/880/880i/900N/980/980N
	8	06	33	02	M		
	8	06	33	01	Y		
ED-3D	8	06	34	03	C	T0322/T0422	For Epson Stylus C80/ C80N/C80WN/CX5100/CX5200/CX5300/CX5400/ C82N/C82WN/CX4500
	8	06	34	02	M	T0323/T0423	
	8	06	34	01	Y	T0324/T0424	
ED-3E	8	06	35	03	C	T0562/T0552	For Epson stylus photo RX430/RX420/RX520/R250/RX530
	8	06	35	02	M	T0563/T0553	
	8	06	35	01	Y	T0564/T0554	
ED-3G	8	06	37	03	C	T0632/T0602	Epson Stylus C67/C87/CX3700/ CX4700/CX4100/CX3810/CX4200/CX4800/CX5800F/CX7800/C88 / CX3800/CX5700F
	8	06	37	02	M	T0633/T0603	
	8	06	37	01	Y	T0634/T0604	
ED-3K	8	06	41	03	C	T0762	For Epson stylus Me200/Me2/C58/CX2800/C57
	8	06	41	02	M	T0763	
	8	06	41	01	Y	T0764	
ED-3L	8	06	42	03	C	T5852/T5846	Epson PictureMate PM210/PM250/PM200/PM270
	8	06	42	02	M		
	8	06	42	01	Y		
ED-3LC					C	T5852/T5846	Epson PictureMate PM210/PM250/PM200/PM270(Light resistance dye ink)
					M		
					Y		
					k		
ED-3M	8	06	43	02	C	T0712/T0692/T0732/T0922	For Epson Stylus Photo RX5900 Epson Stylus /C79/C92/C110/C90/D92/D120/D78/D68/D88/CX5000/6000/7000 F/CX5900/CX3900/C90/CX4300/CX5500//CX4900/CX6900F/CX5600/CX5500/CX8300/CX7300/CX5600,DX8400/DX8450/T20/TX200 ,
	8	06	43	02	M	T0713/T0693/T0733/T0923	
	8	06	43	01	Y	T0714/T0694/T0734/T0924	
ED-5A	8	06	51	03	C	T008/T027	For Epson Photo790/870/875DC/890/895/915/ SP810/830/925/935
	8	06	51	02	M		
	8	06	51	01	Y		
	8	06	51	06	LC		
	8	06	51	05	LM		

# Products List

ED-5B	8	06	52	03	C	T053/T001/S020110/S020193	For Epson stylus photo 1200/700/750/EX/750 for WebTV/ 710/720/EX3
	8	06	52	02	M		
	8	06	52	01	Y		
	8	06	52	06	LC		
	8	06	52	05	LM		
ED-5C	8	06	53	03	C	T0482/T0492	For Epson stylus RX500/ R300/ R320/R300M/R200/RX600/RX620/R220/R340/ RX510/RX630/R310/R210/R230/R350/RX650
	8	06	53	02	M	T0483/T0493	
	8	06	53	01	Y	T0484/T0494	
	8	06	53	06	LC	T0485/T0495	
	8	06	53	05	LM	T0486/T0496	
ED-5H	8	06	58	03	C	T0332	Epson stylus Photo 950
	8	06	58	02	M	T0333	
	8	06	58	01	Y	T0334	
	8	06	58	06	LC	T0335	
	8	06	58	05	LM	T0336	
ED-5J	8	06	60	03	C	T009	For Epson Photo 1270/1280/1290
	8	06	60	02	M		
	8	06	60	01	Y		
	8	06	60	06	LC		
	8	06	60	05	LM		
ED-5K	8	06	61	03	C	T5592	For Epson Stylus Photo RX700
	8	06	61	02	M	T5593	
	8	06	61	01	Y	T5594	
	8	06	61	06	LC	T5595	
	8	06	61	05	LM	T5596	
ED-5L	8	06	62	04	K	T557	Epson Pictre Mate 100/500
	8	06	62	03	C		
	8	06	62	02	M		
	8	06	62	01	Y		
	8	06	62	23	B		
	8	06	62	12	R		
ED-5M	8	06	63	03	C	<b>T0822/T0812/T0712/T0692/T0732</b>	For Epson Stylus Photo RX590/R390/R290//R270/RX610/RX690/1410/R260/R265 Epson Stylus D78/CX5000/6000/7000F/CX5900/C79/CX3900/CX4900/CX6900F
	8	06	63	02	M	<b>T0823/T0813/T0713/T0693/T0733</b>	
	8	06	63	01	Y	<b>T0824/T0814/T0714/T0694/T0734</b>	
	8	06	63	06	LC	<b>T0825/T0815</b>	
	8	06	63	05	LM	<b>T0826/T0816</b>	
ED-5PC	8	06	66	04	K	T0821/T0811	For Epson Stylus Photo RX590/R390/R290//R270/RX610/RX690/1410/R260/R265 (Light resistance dye ink)
	8	06	66	03	C	T0822/T0812	
	8	06	66	02	M	T0823/T0813	
	8	06	66	01	Y	T0824/T0814	
	8	06	66	06	LC	T0825/T0815	
	8	06	66	05	LM	T0826/T0816	
ED-8A	8	06	81	03	C	T0542	Epson stylus Photo R800/R1800
	8	06	81	02	M	T0543	
	8	06	81	01	Y	T0544	
	8	06	81	23	B	T0549	
	8	06	81	12	R	T0547	
	8	06	81	09	MK	T0548	
	8	06	81	08	PK	T0541	
	8	06	81	10	GO	T0540	

# Products List

ED-8B	8	06	82	09	MK	T0348	Epson stylus Photo 2100/2200
	8	06	82	03	C	T0342	
	8	06	82	02	M	T0343	
	8	06	82	01	Y	T0344	
	8	06	82	06	LC	T0345	
	8	06	82	05	LM	T0346	
	8	06	82	07	LK	T0347	
	8	06	82	08	PK	T0341	
ED-8E	8	06	85	03	C	T0872	Epson stylus Photo R1900
	8	06	85	02	M	T0873	
	8	06	85	01	Y	T0874	
	8	06	85	14	OR	T0879	
	8	06	85	12	R	T0877	
	8	06	85	09	MK	T0878	
	8	06	85	08	PK	T0871	
	8	06	85	10	GO	T0870	
EDPL-6A	8	16	61	03	C	T5492/T5140/T4630	For Epson Stylus Pro 10600/10000/7000/9000( T407-T411)
	8	16	61	02	M	T5493/T5130/T4620	
	8	16	61	01	Y	T5494/T5120/T4610	
	8	16	61	06	LC	T5495/T5160/T4650	
	8	16	61	05	LM	T5496/T5150/T4640	
	8	16	61	08	PK	T5491/T5110/T4600	
EDPL-8C	8	16	83	09	MK	T5438/T545200/T544200	Epson stylus Pro 7600/9600/4000/9400/7400/4400
	8	16	83	03	C	T5432/T545200/T544300	
	8	16	83	02	M	T5433/T545300/T544400	
	8	16	83	01	Y	T5434/T545400/T544500	
	8	16	83	06	LC	T5435/T545500/T544500	
	8	16	83	05	LM	T5436/T545600/T544600	
	8	16	83	07	LK	T5437/T545700	
	8	16	83	08	PK	T5431/T545100	
EDPL-8D	8	16	84	03	C	T0598/T5438/T5448/T5678/T5668	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880/3800
	8	16	84	02	M	T0592/T5642/T5652/T5622/T5632	
	8	16	84	01	Y	T0593/T5643/T5653/T5623/T5633	
	8	16	84	06	LC	T0594/T5644/T5654/T5624/T5634	
	8	16	84	05	LM	T0595/T5645/T5655/T5625/T5635	
	8	16	84	07	LK	T0596/T5646/T5656/T5626/T5636	
	8	16	84	08	PK	T0597/T5647/T5657/T5627/T5637	
	8	16	84	09	MK	T0591/T5641/T5651/T5621/T5631	
	8	16	84	11	LLK	T0599/T5649/T5659/T5629/T5639	
ED-1A	8	06	11	04	K	Epson Series	Epson Series
ED-1H	8	06	18	04	K	Epson Series	Epson Series(new)

## Item 2-- Epson All Black Ink (Dye Ink)

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
ED-4BW	8	06	04	04	BK	For Epson series( All black dye ink)	For Epson Four colors inkjet Printer
					KC		
	8	06	04	14	KM		
					KY		

# Products List

ED-6BW	8	06	06	04	BK	For Epson series(All black dye ink)	For Epson Six colors inkjet Printer
					KC		
	8	06	06	14	KM		
					KY		
	8	06	06	24	KLC		
					KLM		

## Item 3--Specific dye ink for CANON desktop & LFP printers (DYE)

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
CD-3A	8	07	31	03	-C	BCI-24C	For Canon iP1000/1500/2000,i250/320/350/450/450x/455/470D/475D, 200/200x/300/330Photo,mp110/mp130mp360/mp370/mp390/mpc190/ mpc200Photo
	8	07	31	02	-M		
	8	07	31	01	-Y		
CD-3C	8	07	33	03	-C	BCI-21C	For Canon S100,BJC-2000/BJC-2100/5000/5100/5500,C70/75/80,FAX-B180C/B210C/B215C/B230C
	8	07	33	02	-M		
	8	07	33	01	-Y		
CD-3D	8	07	34	03	-C	BCI-15C	For Canon i70/i80
	8	07	34	02	-M		
	8	07	34	01	-Y		
CD-3E	8	07	35	03	-C	<b>PG41/CL41C/CL38/CL-51C</b>	<b>For Canon MP150/170/450/MP145,iP1600/2200/IP1200,Canon PIXMA IP2500/IP1800/1700/1880 /CANON IP2580/</b>
	8	07	35	02	-M		
	8	07	35	01	-Y		
CD-3F	8	07	36	03	-C	CLI-8C	<b>For Canon Ip4200/ PIXMA IP6700D/IP3300/IP4300/IP4500/IP3500/Pixma 3300/ IP5300/PIXMA Pro9000</b>
	8	07	36	02	-M	CLI-8M	
	8	07	36	01	-Y	CLI-8Y	
	8	07	36	06	-LC	CLI-8PC	
	8	07	36	05	-LM	CLI-8PM	
CD-5A	8	07	51	03	-C	BCI-3eC	For Canon i550/i550x/i6500/i850,S400/S400x/S450/S4500/S500/S520/S520x/S530D/S600/ S630/S6300/S750, BJC-3000/BJC6000/BJC6100/BJC6200/ BJC6200S/BJC6500, MPC400/ MPC600F, MP700Photo/MP730Photo,C100
	8	07	51	02	-M	BCI-3eM	
	8	07	51	01	-Y	BCI-3eY	
	8	07	51	06	-LC	BCI-3ePC	
	8	07	51	05	-LM	BCI-3ePM	
CD-5B	8	07	52	03	-C	BCI-5	Canon BJC850/860/870
	8	07	52	02	-M		
	8	07	52	01	-Y		
	8	07	52	06	-LC		
	8	07	52	05	-LM		
CD-8A	8	07	81	03	-C	BCI-6C	For CANON iP3000/4000/4000R/5000/6000D/8500,i560/865/905D/9100/950/965/990/9950, S800/820/ 820D/830D/900/9000,BJC-8200 Photo,MP 780/750/760
	8	07	81	02	-M	BCI-6M	
	8	07	81	01	-Y	BCI-6Y	
	8	07	81	06	-LC	BCI-6PC	
	8	07	81	05	-LM	BCI-6PM	
	8	07	81	12	-R	BCI-6R	
	8	07	81	13	-G	BCI-6G	

# Products List

CDPL-6A	8	17	61	03	C	BCI-1431C/BCI-1421C	For Canon Image Prograf W6400/8400
	8	17	61	02	M	BCI-1431M/BCI-1421M	
	8	17	61	01	Y	BCI-1451Y/BCI-1441Y	
	8	17	61	06	LC	BCI-1431PC/BCI-1421PC	
	8	17	61	05	LM	BCI-1431PM/BCI-1421PM	
	8	17	61	08	PK	BCI-1431BK/BCI-1421BK	
	8	17	61	09	MK	BCI-1451MBK/BCI-1441MBK	
CDPL-12A	8	17	B1	03	C	PFI-101C	For Canon image PROGRAF IPF5000/8000/9000/8000S/9000S
	8	17	B1	02	M	PFI-101M	
	8	17	B1	01	Y	PFI-101Y	
	8	17	B1	06	LC	PFI-101PC	
	8	17	B1	05	LM	PFI-101PM	
	8	17	B1	12	R	PFI-101R	
	8	17	B1	13	G	PFI-101G	
	8	17	B1	23	B	PFI-101B	
	8	17	B1	09	MK	PFI-101MBK	
	8	17	B1	08	PK	PFI-101BK	
	8	17	B1	07	LK	PFI-101GY	
8	17	B1	11	LLK	PFI-101PGY		
CD-1A	8	07	11	04	-K	For Canon series	
CD-1AC	8	07	11	04	-K	For Canon series	
CP-1A	9	07	11	04	K	BCI-3eBK/ BCI-24B/PGI-5BK	Pigment black ink for Canon Inkjet printers

## Item 4--Specific dye ink for HP desktop & LFP printers (DYE)

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
HD-3A	8	08	31	04	-K	51645(No.45) / 6615(No.15)	For HP Color Copier 110 /120 , Color Copier 140; 170 , Color Copier 260 /270 , Deskjet 710; 740C , Deskjet 810; 812C/815C/816C , Deskjet 820 Cxi , Deskjet 825C , Deskjet 830 / 832C , Deskjet 840; 845 C , Deskjet 850; 855C , Deskjet 870Cxi , Deskjet 880; 899 C , Deskjet 1000 C (xi) , Deskjet 1100 C , Deskjet 1120 / 1125 C , Desk 1170 / 1175 C , Officejet 1150 Series , Officejet 1170 Series , Officejet Pro 1150 C , Office R Series , Office T Series , PSC 500 Series
	8	08	31	03	-C	C51641(No.41) / C1823(No.23) / C6625(No.17)	
	8	08	31	02	-MK		
	8	08	31	01	-Y		
HD-3B	8	08	32	04	-K	51626(No.26) / 51633(No.33)	2276A / 2277A / 2279A , 2279A Desk Writer , Designjet 200 / 220 , Deskjet 400 / 400L / 420C , DeskWriter 500C / 540C / 550C / 560C , Deskjet , Deskjet 300 port , Deskjet 310 , Deskjet 320 , Deskjet 330 / 340 C , Deskjet 500 , Deskjet 500C , Deskjet 510 / 520 , Deskjet 540 , Deskjet 550 C , Deskjet 560 C , Deskwriter 540 / 550C / 560C , Fax 200 , Fax 300 Series , Fax 700 Series , Fax 900 , Fax 950 , Officejet , Officejet 300 Series , Designjet 600
	8	08	32	03	-C	51625(No.25)	
	8	08	32	02	-M		
	8	08	32	01	-Y		
HD-3C	8	08	33	04	-K	51645(No.45) / C6615(No.15)	Color Copier 180 / 190 , Color Copier 280 / 290 , Color Copier 310 , Deskjet 910; 919 C , Deskjet 920; 929 C , Deskjet 930; 939 C Deskjet 940; 949 C , Deskjet 950; 959 C , Deskjet 960; 969 C , Deskjet 970; 979 C , Deskjet 980; 989 C , Deskjet 990; 999 C , Deskjet 1180 Series , Deskjet 1220 C Series , Deskjet 1280 Series , Deskjet 3810 / 3816 / 3820 / 3822 , Deskjet 6122 / 6127 , Deskjet 9300 , Digital Copier 310 , Fax 1200 Series , Fax 1230 , Officejet 5100 Series , Officejet K Series , Officejet V Series , Photosmart 1000 / 1100 / 1200 / 1315 Series , PSC 700 Series , PSC 900 Series
	8	08	33	03	-C	C6578A/C1823d/51641A	
	8	08	33	02	-M		
	8	08	33	01	-Y		

# Products List

HD-3D	8	08	34	04	-K	C9351(No.21) / CB334AE(No.54) / C8727(No.27) / C6656(No.56) / C8816(No.816)	915 Inkjet All-in-One printer , Deskjet 450 Series , Deskjet 3645 / 3650 , Deskjet 3658/3668 , Deskjet 3840 , Deskjet 3920 / 3930 / 3940 , Deskjet 5150 Color inkjet / Deskjet 5500/5600 , Deskjet 5850 , Deskjet 3558 , Deskjet D1311 / D1320 / D1330 / D1341 / D1360 / 1368 , Deskjet 9800 Series , Deskjet D2320 / D2330 / D2338 / D2345 / D2360 , Deskjet D2430 / D2445 / D2460 , Deskjet D2468 , Deskjet F300 Series , Deskjet F2180 / 2110 / 2120 / 2128 / 2140 / 2185 / 2187 / 2188 , Deskjet 3320 / 3325 / 3550 / 3520 / 3535 / 3400 Series , Deskjet 3538 , Deskjet F4100 Series , Digital Copier 410 , Fax 1240 / 1250 , Officejet 1110 / 4100 / 4200 / 4300 , Officejet 5500 Series / Officejet 5605 / 5605z / 5608 / 5610 / 5610v / 5610vi / 5615 , Officejet 6100 / 6110 Series , Officejet J3600 / J5500 Series , Officejet Pro L7590 , Photosmart 7150 / 7200 / 7260 / 7345 / 7350 / 7450 / 7459 / 7550 / 7660 / 7665 , Photosmart 7760 / 7960 , PSC 1110 / 1200 Series , PSC 1215 , PSC 1300 Series , PSC 1400 Series , PSC 2100 / 2200 Series , PSC 2170 / 2175 , PSC 2400 / 2500 Photosmart Series , Photosmart 100 / 130 / 230 ,	
	8	08	34	03	-C	C9352(No.22) / C8728(No.28) / C6657(No.57) / C8817(No.817)		
	8	08	34	02	-M			
	8	08	34	01	-Y			
	8	08	34	04	-K	C6658(No.58)		915 Inkjet All-in-One printer , Deskjet 450 Series , Deskjet 3645 / 3650 , Deskjet 3658/3668 , Deskjet 3840 , Deskjet 3920 / 3930 / 3940 , Deskjet 5150 Color inkjet / Deskjet 5500/5600 , Deskjet 5850 , Deskjet 3558 , Deskjet D1311 / D1320 / D1330 / D1341 / D1360 / 1368 , Deskjet 9800 Series , Deskjet D2320 / D2330 / D2338 / D2345 / D2360 , Deskjet D2430 / D2445 / D2460 , Deskjet D2468 , Deskjet F300 Series , Deskjet F2180 / 2110 / 2120 / 2128 / 2140 / 2185 / 2187 / 2188 , Deskjet 3320 / 3325 / 3550 / 3520 / 3535 / 3400 Series , Deskjet 3538 , Deskjet F4100 Series , Digital Copier 410 , Fax 1240 / 1250 , Officejet 1110 / 4100 / 4200 / 4300 , Officejet 5500 Series / Officejet 5605 / 5605z / 5608 / 5610 / 5610v / 5610vi / 5615 , Officejet 6100 / 6110 Series , Officejet J3600 / J5500 Series , Officejet Pro L7590 , Photosmart 7150 / 7200 / 7260 / 7345 / 7350 / 7450 / 7459 / 7550 / 7660 / 7665 , Photosmart 7760 / 7960 , PSC 1110 / 1200 Series , PSC 1215 , PSC 1300 Series , PSC 1400 Series , PSC 2100 / 2200 Series , PSC 2170 / 2175 , PSC 2400 / 2500 Photosmart Series , Photosmart 100 / 130 / 230 ,
	8	08	34	06	-LC			
	8	08	34	05	-LM			
	8	08	34	08	-PK	C9359(No.59)		
	8	08	34	07	-MG			
8	08	34	11	-LG				
HD-3E	8	08	35	04	-K	51629(No.29) / C6614(No.20)	Deskjet 600 C / Deskjet 610 C / 615 C , Deskjet 650i / 659 C , Deskjet 640i / 649 C , Deskjet 650i / 659 C , Deskjet 660i / 666 C , Deskjet 670i / 679 C , Deskjet 680i / 682 C , Deskjet 690i / 699 C , Deskwriter 600 , Deskwriter 660C / 670C , Fax 910 / 920 , Fax 925xi , Fax1000 Series , Fax 1040 Series , Fax 1050 Series , Officejet 500 Series , Officejet 600 Series , Officejet 700 Series , PSC 300 Series	
	8	08	35	03	-C	51649(No.49)		
	8	08	35	02	-M			
	8	08	35	01	-Y			
	8	08	35	04	-K	C1816(No.16)		
	8	08	35	06	-LC			
	8	08	35	05	-LM			
HD-3F	8	08	36	04	-K	C8765(No.94,338,131,852) / C9362(No.92,336,132,850) / C8767(No.96,339,130,853) / C9364(No.98,337,129)	For HP Deskjet 460 Mobile Series , Deskjet 5420v / 5440 / 5442 , Deskjet 5740 / 5743 / 5745 / 5748 / Deskjet 5940 / 5940xi / 5943 / Deskjet 6520 / 6540 / 6543 / 6548 , Deskjet 6840 / 6843 , Deskjet 6940 / 6940dt / 6943 , Deskjet 6980 / 6980dt / 6983 / 6988 / 6988dt , Deskjet 9800 Series , Deskjet D1400 Series , Deskjet D4145 / D4155 / D4160 / D4163 , Officejet 6210 / 6215 , Officejet 6310 / 6315 , Officejet 7210 , Officejet 7310 / 7313 / 7410 / 7413 , Office K7100 / 7103 / 7108 , Photosmart 320 / 325 , Photosmart 335 , Photosmart 370 / 375 , Photosmart 385 , Photosmart 422 / 422v / 422xi / 428 / 428v / 428xi , Photosmart 475 , Photosmart 2575 , Photosmart 2610 / 2613 / 2710 / 2713 , Photosmart 8050 , Photosmart 8150 / 8153 / 8450 / 8453 , Photosmart 8700 / 8750 / 8750gp , Photosmart C3180 , Photosmart C4180 , Photosmart D5160 , Photosmart Pro B8300 Printer Series , PSC 1500 Series , PSC 1610 , PSC 2350 / 2355 , Officejet H470 Mobile Printer Series	
	8	08	36	03	-C	C8766(No.95,343,135,855) / C9363(No.97,344,134,857) / C9361(No.93,342,136,854)		
	8	08	36	02	-M			
	8	08	36	01	-Y			
	8	08	36	04	-K	C9369(No.99,348,138,858) / C9365(No.101)		
	8	08	36	06	-LC			
	8	08	36	05	-LM			
	8	08	36	08	-PK	C9368(No.100) / C9360(No.102)		
	8	08	36	07	-MG			
8	08	36	11	-LG				
HD-3G	8	08	37	04	-K	CB335(No.350,74,140) / CB336(No.350XL,74XL,140XL)	For HP Deskjet D1560 , Deskjet D4260 , Officejet J5780 / J5785 , Officejet J6400 Series , Officejet J6480 , Photosmart C4200 Series , Photosmart C4340 Series , Photosmart C4380 Series , Photosmart C5200 Series , Photosmart D5300 Series	
	8	08	37	03	-C	CB337(351,75,141) / CB338(351XL,75XL,141XL)		
	8	08	37	02	-M			
	8	08	37	01	-Y			
	8	08	37	04	-K	C9369(No.99,348,138,858)		
	8	08	37	06	-LC			
	8	08	37	05	-LM			
	8	08	37	08	-PK	C9368(No.100)		
8	08	37	07	-MG				
8	08	37	11	-LG				
HD-3H	8	08	38	04	-K	51606 A / 51639 A	Paintjet / Paintjet XL / Paintjet 3630 , Paintjet XL 300	
	8	08	38	03	-C	51606 C / 51639 C		
	8	08	38	02	-M	51606 M / 51639 M		
	8	08	38	01	-Y	51606 Y / 51639 Y		

# Products List

HD-3J	8	08	40	04	-K	C4936(No.18)	For HP Officejet Pro K5300 / Officejet Pro L7380
	8	08	40	03	-C	C4937(No.18)	
	8	08	40	02	-M	C4938(No.18)	
	8	08	40	01	-Y	C4939(No.18)	
HD-3K	8	08	41	04	-K	CC640W(No.60) / CC641W(No.60XL)	For HP Deskjet D2500 Series , Deskjet F4200 Series
	8	08	41	03	-C	CC643W(No.60) / CC644W(No.60XL)	
	8	08	41	02	-M	CC643W(No.60) / CC644W(No.60XL)	
	8	08	41	01	-Y	CC643W(No.60) / CC644W(No.60XL)	
HD-3L	8	08	42	04	-K	C4844(No.10)	For HP 2000c Series , 2000c Professional Series , 2500c Pro Series , Designjet Color Pro GA / CAD
	8	08	42	03	-C	C4841(No.10)	
	8	08	42	02	-M	C4843(No.10)	
	8	08	42	01	-Y	C4842(No.10)	
HD-3M	8	08	43	03	-C	CB304(No.110)	For HP Photosmart A310 Series , Photosmart A320 Series , Photosmart A430 Series , Photosmart A440 Series , Photosmart A510 Series , Photosmart A520 Series , Photosmart A610 / A612 , Photosmart A616 / A617 / A618 , Photosmart A620 Series , Photosmart A710 Series , Photosmart A820 Series
	8	08	43	02	-M		
	8	08	43	01	-Y		
HD-3P	8	08	44	04	-K	C5011(No.14)	For HP Color Inkjet CP1160 , Digital Copier 610 , Officejet D Series , Officejet 7100 Series
	8	08	44	03	-C	C5010(No.14)	
	8	08	44	02	-M		
	8	08	44	01	-Y		
HD-3Q	8	08	45	04	-K	51640 A	For HP Designjet 250 C , Designjet 650 C / 650 PS , Designjet 430 , Designjet 330
	8	08	45	03	-C	51650 C	
	8	08	45	02	-M	51650 M	
	8	08	45	01	-Y	51650 Y	
HD-3R	8	08	46	04	-K	51640A / 51645A	For HP Designjet 350 C / 450 C / 455 CA / 488 CA , Designjet 750 C / 755 CM , Designjet 700
	8	08	46	03	-C	51644 C	
	8	08	46	02	-M	51644 M	
	8	08	46	01	-Y	51644 Y	
HD-3S	8	08	47	04	-K	51645(No.45)	For HP Color Copier 210 Series , Copy Jet / Copy Jet M , Designjet 230 , Deskjet 1200 C / PS , Deskjet 1600 C
	8	08	47	03	-C	51640C	
	8	08	47	02	-M	51640M	
	8	08	47	01	-Y	51640Y	
HD-5C	8	08	53	04	-K	C8719(No.02,363,177,801) / C8721(No.02,363,177,801)	For HP Photosmart 3210 / 3310 , Photosmart 8250 , Photosmart C5140 / C5150 / C5180 / C5185 / C5188 , Photosmart C6150 / C6180 / C6185 / C6188 , Photosmart C7180 , Photosmart C6200 Series , Photosmart C7200 Series , Photosmart C8150 / C8180 / C8183 / C8188 , Photosmart D6160 / D6163 / D6168 , Photosmart D7145 / D7155 / D7160 / D7163 / D7168 / Photosmart D7200 / D7400 , Photosmart D7345 / D7355 / D7360 / D7363 / D7368
	8	08	53	03	-C	C8771(No.02,363,177,801)	
	8	08	53	02	-M	C8772(No.02,363,177,801)	
	8	08	53	01	-Y	C8773(No.02,363,177,802)	
	8	08	53	06	-LC	C8774(No.02,363,177,802)	
	8	08	53	05	-LM	C8775(No.02,363,177,802)	
HDPL-3A	8	18	31	03	-C	C4836(No.11) / 4804(No.12) / C4911(No.82) / 4815(No.13)	For HP Business InkJet 1000 / 1100 / 1200 / 2200 / 2230 / 2250 / 2280 / 2300 / 2500 / 2600 / 2800 / CP1700 / 3000 Series , Color Inkjet CP1700 Series , Designjet 70 , Designjet 100/ 110 Plus / 110 Plus NR , Designjet 500 / 500+ / 500PS / 500PS+ , Designjet 500 C , Designjet 800 Series , Officejet 9100 Series , Officejet Pro K850 , Officejet Pro K850dn
	8	18	31	02	-M	C4837(No.11) / C4805(No.12) / C4912(No.82) / 4816(No.13)	
	8	18	31	01	-Y	C4838(No.11) / C4806(No.12) / C4913(No.82) / 4817(No.13)	
	8	18	31	04	-K	C4844(No.10) / C4814(No.13)	
HDPL-3B	8	18	32	03	-C	C9386(No.88) / C9391(No.88)	For HP Officejet Pro K550 , Officejet Pro K550dtn , Officejet Pro K5400 / K5400tn / K5400dtn , Officejet Pro K8600 Series , Officejet Pro L7000 , Officejet Pro L7400 Series , Officejet Pro L7580 / 7680 / 7780
	8	18	32	02	-M	C9387(No.88) / C9392(No.88)	
	8	18	32	01	-Y	C9388(No.88) / C9393(No.88)	
	8	18	32	04	-K	C9385(No.88) / C9395(No.88)	

# Products List

HDPL-6A	8	18	61	03	-C	C4836(No.11)	For HP Designjet 120 / 120 nr , Designjet 10 / 20 / 50
	8	18	61	02	-M	C4837(No.11)	
	8	18	61	01	-Y	C4913(No.82)	
	8	18	61	06	-LC	C5017(No.84)	
	8	18	61	05	-LM	C5018(No.84)	
	8	18	61	04	-K	C5016(No.84)	
HDPL-6B	8	18	62	03	-C	C9425(No.85) / C4931A / C4941A	For HP Designjet 30 / 90 / 90r / 90gp / 130 / 130nr 130gp , Designjet 5500 / 5000
	8	18	62	02	-M	C9424(No.85) / C4932A / C4942A	
	8	18	62	01	-Y	C9427(No.85) / C4933A / C4943A	
	8	18	62	06	-LC	C9428(No.85) / C4934A / C4944A	
	8	18	62	05	-LM	C9429(No.85) / C4935A / C4945A	
	8	18	62	04	-K	C5016(No.84) / C4930A / C4940A	
HDPL-8A	8	18	81	03	-C	C9415(No.38)	For HP Photosmart Pro B8800 / Pro B8850 , Photosmart Pro B9180 / 9180gp
	8	18	81	02	-M	C9417(No.38)	
	8	18	81	01	-Y	C9419(No.38)	
	8	18	81	06	-LC	C9418(No.38)	
	8	18	81	05	-LM	C9416(No.38)	
	8	18	81	07	-LK	C9414(No.38)	
	8	18	81	09	-MK	C9412(No.38)	
	8	18	81	08	-PK	C9413(No.38)	
HDPL-8B	8	18	81	03	C	C9452A	For HP Designje Z2100
	8	18	81	02	M	C9453A	
	8	18	81	01	Y	C9454A	
	8	18	81	06	LC	C9490A	
	8	18	81	05	LM	C9455A	
	8	18	81	07	LG	C9451A	
	8	18	81	09	MK	C9448A	
	8	18	81	08	PK	C9449A	
HD-1A	8	08	11	04	-K	HP series	For HP Series( Dye ink)
HP-1A	9	08	11	04	K	51629/51645/6615	Pigment black ink for HP Inkjet printers
HP-1D	9	08	14	04	K	51629/51645/6615	Pigment black ink for HP Inkjet printers
HP-1E	9	08	15	04	K	6656/8727	Pigment black ink for HP Inkjet printers
HP-1M	9	08	23	04	K	HP series	Pigment black ink for HP Inkjet printers

## Item 5---Dye Ink For Lexmark Printers

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
LD-3A	8	09	31	03	-C	Lexmark 10N0026/LENOVO 13	For Lexmark X75/X1140/ X1150/ X1185/ X2250/ X1110/ X1155/Z13/ Z513/ Z515/ Z603/Z605/ Z615/Z23/ Z33/ Z25/Z35/ LENOVO 3310/3300/3210/3200/2210/2200/M720/M620E
	8	09	31	02	-M		
	8	09	31	01	-Y		
LD-3N	8	09	30	03	C	Lexmark series	Lexmark 三彩通用
	8	09	30	02	M		
	8	09	30	01	Y		
LD-1A	8	09	11	04	-K	Lexmark 10N0016/LENOVO 11	For Lexmark X75/X1140/ X1150/ X1185/ X2250/ X1110/ X1155/Z13/ Z513/ Z515/Z603/Z605/ Z615/Z23/ Z33/ Z25/Z35/ LENOVO 3310/3300/3210/3200/2210/2200/M720/M620E
LP-1A	9	09	11	04	K	Lexmark 10N0016/LENOVO 11	Pigment ink for Lexmark Printers

# Products List

## Item 6---Dye ink for BROTHER Printers

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
BD-3A	8	05	31	03	-C	LC950C	For Brother MFC-210C/410CN/3240C/5440CN/DCP-110C/FAX-1840C
	8	05	31	02	-M	LC950M	
	8	05	31	01	-Y	LC950Y	
BD-3B	8	05	32	03	C	LC51C	For Brother MFC-240C/DCP330C
	8	05	32	02	M	LC51M	
	8	05	32	01	Y	LC51Y	
BD-3N	8	05	30	03	C	LC950C/LC51C/LC960C	For Brother MFC-210C/410CN/3240C/5440CN/DCP-110C/FAX-1840C/MFC-240C/DCP330C
	8	05	30	02	M	LC950M/LC51MLC960M	
	8	05	30	01	Y	LC950M/LC51Y/LC960M	
BD-1A	8	05	11	04	-K	LC950BK	MFC-210C/410CN/3240C/5440CN/DCP-110C/FAX-1840C

## Item 7--Dye ink for ROLAND Printers

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
RD-8A	7	19	81	03	-C	FPG-CY	For ROLAND FJ-540 / FJ-740K/Mimaki JV-22
	7	19	81	02	-M	FPG-MG	
	7	19	81	01	-Y	FPG-YE	
	7	19	81	06	-LC	FPG-LC	
	7	19	81	05	-LM	FPG-LM	
	7	19	81	12	-R	FPG-OR	
	7	19	81	13	-G	FPG-GR	
	7	19	81	04	-K	FPG-BK	

## Item 8- Universal Ink

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
UD-6A	8	00	61	03	C	For Epson /Canon/HP/Lexmark Inkjet cartridge	For Epson /Canon/HP/Lexmark Inkjet printers
	8	00	61	03	M		
	8	00	61	01	Y		
	8	00	61	06	LC		
	8	00	61	05	LM		
	8	00	61	10	K		
UDP-6B	8	00	62	03	C	For Piezoelectric series	For Piezoelectric Ink-jet Printer
	8	00	62	02	M		
	8	00	62	01	Y		
	8	00	62	06	LC		
	8	00	62	05	LM		
	8	00	62	04	K		
UDT-6C	8	00	63	03	C	For Thermal series	For Thermal Ink-jet Printer
	8	00	63	02	M		
	8	00	63	01	Y		
	8	00	63	06	LC		
	8	00	63	05	LM		
	8	00	63	04	K		

# Products List

UDE-1	8	06	11	03	C	T039/T029/T0472/T0562/T0632/T027/T009/T0492/T0332/T5592	For Epson C43UX/C61/C63/C65/R250/C67/CX3700 FOR EPSON 830U/R210/R230/R310/PHOTO950/1290/PM-A950
	8	06	11	02	M	T039/T029/T0473/T0563/T0633/T027/T009/T0493/T0333/T5593	
	8	06	11	01	Y	T039/T029/T0474/T0564/T0634/T027/T009/T0494/T0334/T5594	
	8	06	11	06	LC	T027/T009/T0495/T0335/T5595	
	8	06	11	05	LM	T027/T009/T0496/T0336/T5596	
UDC-1	8	07	11	03	C	BCI-24C/BCI-3C/BCI-6C/BCI-5C/CLI-8C	For Canon Printer Series
	8	07	11	02	M	BCI-24C/BCI-3M/BCI-6M/BCI-5M/CLI-8M	
	8	07	11	01	Y	BCI-24C/BCI-3Y/BCI-6Y/BCI-5Y/CLI-8Y	
	8	07	11	06	LC	BCI-3PC/BCI-6PC/BCI-5PC/CLI-8PC	
	8	07	11	05	LM	BCI-3PM/BCI-6PM/BCI-5PM/CLI-8PM	
	8	07	11	12	R	BCI-6R	
UDH-1	8	08	11	03	C	c8728a,c6657a,c9352a,c9361w,c8766w,c9363w	For HP Deskjet 5652/3325,D2360/F380, Deskjet 5440/5740/6540/6840/6548/6848
	8	08	11	02	M		
	8	08	11	01	Y		
	8	08	11	06	LC	c8727a c6656a	
	8	08	11	05	LM	C9351a,c9362wa	
	8	08	11	04	K	c8765wa	
UD-1A	8	00	11	04	K	For Epson /Canon/HP/Lexmark Black inkjet Cartridge	For Epson /Canon/HP/Lexmark
UP-1A	9	00	11	04	K	Pigment ink type For Epson /Canon/HP/Lexmark Black inkjet Cartridge	For Epson /Canon/HP/Lexmark Inkjet printers
UPT-1A	9	01	11	04	K	For Thermal series-25%(Black pigment ink)	HP/canon/lexmark
UPT-1B	9	01	12	04	K	For Thermal series-20% (Black pigment ink)	HP/canon/lexmark
UPT-1C	9	01	13	04	K	For Thermal series-12% (Black pigment ink)	HP/canon/lexmark

## Item 9-- Pigment ink for Epson Desktop & LFP printer ink

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
EP-3A	9	06	31	04	K	T0461	For Epson stylus C63/CX6300/C65/CX3500CX6500
	9	06	31	03	C	T0472	
	9	06	31	02	M	T0473	
	9	06	31	01	Y	T0474	
EP-3B	9	06	2	04	K	T0321/T0421	For Epson Stylus C80/C80N/C80W NX5100/CX5200/CX5300/CX5400/C82N/C82WN
	9	06	32	03	C	T0322/T0422	
	9	06	62	02	M	T0323/T0423	
	9	06	32	01	Y	T0324/T0424	
EP-3C	9	06	33	04	K	T0561/T0551	For Epson StylusPhoto RX430/RX420/RX520/R250/RX530
	9	06	33	03	C	T0562/T0552	
	9	06	33	02	M	T0563/T0553	
	9	06	33	01	Y	T0564/T0554	
EP-3D	9	06	34	04	K	T0631/T0601	For Epson Stylus C67/C87/CX3700/CX4700/CX4100/CX3810/CX4200/CX4800/CX5800F/CX7800/C88/CX3800
	9	06	34	03	C	T0632/T0602	
	9	06	34	02	M	T0633/T0603	
	9	06	34	01	Y	T0634/T0604	
EP-3F	9	06	35	04	K	T0711/T0691/T0731/T0921	For Epson Stylus Photo RX5900
	9	06	35	03	C	T0712/T0692/T0732/T0922	Epson Stylus D92/D120/D78/D68/D88/CX5000/6000/7000F/CX5900/C79/C110/

# Products List

	9	06	35	02	M	T0713/T0693/T0733/T0923	C92/D120/D130/D60/D66/DX3000/R300/T001/TX3000/C130/C170/CX3900/C90/CX4300/CX5500,DX8400/DX8450/CX7300/T20/TX200
	9	06	35	01	Y	T0714/T0694/T0734/T0924	
EP-5A	9	06	51	04	K	T0481/T0491	For Epson stylus RX500/ R300/ R320/R300M/R200/RX600/RX620/R220/R340/ RX510/RX630/R310/R210/R230/R350/RX650
	9	06	51	03	C	T0482/T0492	
	9	06	51	02	M	T0483/T0493	
	9	06	51	01	Y	T0484/T0494	
	9	06	51	06	LC	T0485/T0495	
	9	06	51	05	LM	T0486/T0496	
EP-5B	9	06	52	04	K	T0331	For Epson stylus Photo 950
	9	06	52	03	C	T0332	
	9	06	52	02	M	T0333	
	9	06	52	01	Y	T0334	
	9	06	52	06	LC	T0335	
	9	06	52	05	LM	T0336	
EP-5D	9	06	54	04	K	T0821/T0811	For Epson Stylus Photo RX590/R260/R265/R270/R390/R290
	9	06	54	03	C	T0822/T0812	
	9	06	54	02	M	T0823/T0813	
	9	06	54	01	Y	T0824/T0814	
	9	06	54	06	LC	T0825/T0815	
	9	06	54	05	LM	T0826/T0816	
EP-5E	9	06	55	04	K		For Epson Stylus Photo 1400/1390
	9	06	55	03	C		
	9	06	55	02	M		
	9	06	55	01	Y		
	9	06	55	06	LC		
	9	06	55	05	LM		
EP-8A	9	06	81	03	C	T0542	For Epson Stylus Photo R800/R1800
	9	06	81	02	M	T0543	
	9	06	81	01	Y	T0544	
	9	06	81	23	B	T0549	
	9	06	81	12	R	T0547	
	9	06	81	09	MK	T0548	
	9	06	81	08	PK	T0541	
	9	06	81	10	GO	T0540	
EP-8B	9	06	82	09	MK	T0348	For Epson Stylus Photo 2100/2200
	9	06	82	03	C	T0342	
	9	06	82	02	M	T0343	
	9	06	82	01	Y	T0344	
	9	06	82	06	LC	T0345	
	9	06	82	05	LM	T0346	
	9	06	82	07	LK	T0347	
	9	06	82	08	PK	T0341	
EP-8E	9	06	85	03	C	T0872	For Epson Stylus Photo R1900
	9	06	85	02	M	T0873	
	9	06	85	01	Y	T0874	
	9	06	85	14	OR	T0879	
	9	06	85	12	R	T0877	
	9	06	85	09	MK	T0878	
	9	06	85	08	PK	T0871	
	9	06	85	10	GO	T0870	

# Products List

EP-4BW	9	06	04	04	BK	For Epson Series(ALL BLACK)	For Epson four colors Inkjet Printer
					KC		
	9	06	04	14	KM		
					KY		
EP-6BW	9	06	06	04	BK	For Epson Series(ALL BLACK)	For Epson six colors Inkjet Printer
					KC		
	9	06	06	14	KM		
					KY		
	9	06	06	24	KLC		
					KLM		
EP-1A	9	06	11	04	K	For Epson series	Epson Series

## Item 10-- Pigment ink for Epson LFP Printers

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
EPPL-6A	9	16	61	03	C	T5492/T5140	Epson stylus Pro 10600/10000
	9	16	61	02	M	T5493/T5130	
	9	16	61	01	Y	T5494/T5120	
	9	16	61	06	LC	T5495/T5160	
	9	16	61	05	LM	T5496/T5150	
	9	16	61	08	PK	T5491/T5110	
	9	16	61	09	MK	T5498	
EPPL-8A	9	16	81	09	MK	T5438	Epson stylus Pro 7600/9600/4000/9400
	9	16	81	03	C	T5432	
	9	16	81	02	M	T5433	
	9	16	81	01	Y	T5434	
	9	16	81	06	LC	T5435	
	9	16	81	05	LM	T5436	
	9	16	81	07	LK	T5437	
EPPL-8B	9	16	82	03	C	T0592/T5642/T5622	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880
	9	16	82	02	M	T0593/T5643/T5623	
	9	16	82	01	Y	T0594/T5644/T5624	
	9	16	82	06	LC	T0595/T5645/T5625	
	9	16	82	05	LM	T0596/T5646/T5626	
	9	16	82	07	LK	T0597/T5647/T5627	
	9	16	82	08	PK	T0591/T5641/T5621	
	9	16	82	09	MK	T0598/T5438/T5668	
EP-8ABW	9	16	08	04	PK	For Epson Series(All Black series)	For Epson R1800/R800 Printer
	9	16	08	09	MK		
					KC		
	9	16	08	14	KM		
					KY		
	9	16	08	34	KB		
					KR		
	9	16	08	44	GO		

# Products List

EP-8BBW	9	16	18	04	PK	For Epson Series(All black series)	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880
	9	16	18	09	MK		
					KC		
	9	16	18	14	KM		
					KY		
	9	16	18	24	KLC		
					KLM		
	9	16	18	07	LK		
9	16	18	11	LLK			

## Item 11-Pigment ink for Canon LFP printers

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
CPPL-6A	9	17	61	03	-C	BCI-1431C/BCI-1421C	Canon image PROGRAF W6400/8400
	9	17	61	02	-M	BCI-1431M/BCI-1421M	
	9	17	61	01	-Y	BCI-1451Y/BCI-1441Y	
	9	17	61	06	-LC	BCI-1431PC/BCI-1421PC	
	9	17	61	05	-LM	BCI-1431PM/BCI-1421PM	
	9	17	61	08	-PK	BCI-1431BK/BCI-1421BK	
	9	17	61	09	-MK	BCI-1451MBK/BCI-1441MBK	
CPPL-12A	9	17	B1	09	MK	PFI-101MBK	Canon image PROGRAF IPF5000/8000/9000/8000s/9000s
	9	17	B1	03	C	PFI-101C	
	9	17	B1	02	M	PFI-101M	
	9	17	B1	01	Y	PFI-101Y	
	9	17	B1	06	LC	PFI-101PC	
	9	17	B1	05	LM	PFI-101PM	
	9	17	B1	12	R	PFI-101R	
	9	17	B1	13	G	PFI-101G	
	9	17	B1	23	B	PFI-101B	
	9	17	B1	04	K	PFI-101BK	
	9	17	B1	07	LK	PFI-101GY	
9	17	B1	11	LLK	PFI-101PGY		

## Item 12--Pigment ink for Roland Mimaki

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
RP-8A	9	19	81	03	-C	FPG-CY	For ROLAND FJ-540 / FJ-740K/Mimaki JV-22
	9	19	81	02	-M	FPG-MG	
	9	19	81	01	-Y	FPG-YE	
	9	19	81	06	-LC	FPG-LC	
	9	19	81	05	-LM	FPG-LM	
	9	19	81	12	-R	FPG-OR	
	9	19	81	13	-G	FPG-GR	
	9	19	81	04	-K	FPG-BK	

# Products List

## Item 12+1A---Sublimation ink

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
<b>ESB-3A</b>	7	06	31	04	K	T0631/T0601	For Epson Stylus C67/C87/CX3700/CX4700/CX4100/CX3810/CX4200/CX4800/CX5800F/CX7800/C88/CX3800
	7	06	31	03	C	T0632/T0602	
	7	06	31	02	M	T0633/T0603	
	7	06	31	01	Y	T0634/T0604	
<b>ESB-3B</b>	7	06	32	04	K	T037/T039/T058/ T041/T018/T029	For Epson stylus C42UX/CX1500/C41UX/C43UX/C45/ME 100/ME 1/ 777/ 777i/ 680/685/1000ICS/ C60/C61/CX3100/C50/ C62/CX3200
	7	06	32	03	C		
	7	06	32	02	M		
	7	06	32	01	Y		
<b>ESB-3C</b>	7	06	33	04	K	T0711/T0691/T0731/T0921	For Epson Stylus Photo RX5900 Epson Stylus D92/D120/D78/D68/D88/CX5000/6000/7000F/CX5900/C79/C110/ CX3900/C90/CX4300/CX5500,DX8400/DX8450
	7	06	33	03	C	T0712/T0692/T0732/T0922	
	7	06	33	02	M	T0713/T0693/T0733/T0923	
	7	06	33	01	Y	T0714/T0694/T0734/T0924	
<b>ESB-5A</b>	7	06	51	04	K	T0481/T0491/T0821/T0811	For Epson stylus RX500/ R300/ R320/R300M/R200/RX600/RX620/R220/R340/ RX510/RX630/R310/R210/R230/R350/RX650/RX590/R260/R265/ R270/R390/R290
	7	06	51	03	C	T0482/T0492/T0822/T0812	
	7	06	51	02	M	T0483/T0493/T0823/T0813	
	7	06	51	01	Y	T0484/T0494/T0824/T0814	
	7	06	51	06	LC	T0485/T0495/T0825/T0815	
<b>ESB-8A</b>	7	16	81	03	C	T5438	Epson stylus Pro 7600/9600/4000/9400
	7	16	81	02	M	T5432	
	7	16	81	01	Y	T5433	
	7	16	81	06	LC	T5434	
	7	16	81	05	LM	T5435	
	7	16	81	07	LK	T5436	
	7	16	81	08	PK	T5437	
	7	16	81	09	MK	T5431	
<b>ESB-8B</b>	7	16	82	03	C	T0592/T5642/T5622	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880
	7	16	82	02	M	T0593/T5643/T5623	
	7	16	82	01	Y	T0594/T5644/T5624	
	7	16	82	06	LC	T0595/T5645/T5625	
	7	16	82	05	LM	T0596/T5646/T5626	
	7	16	82	07	LK	T0597/T5647/T5627	
	7	16	82	08	PK	T0591/T5641/T5621	
	7	16	82	09	MK	T0598/T5438/T5668	
<b>ESB-8C</b>	7	16	83	03	C	T0542	For Epson stylus Photo R800/R1800
	7	16	83	02	M	T0543	
	7	16	83	01	Y	T0544	
	7	16	83	23	B	T0549	
	7	16	83	12	R	T0547	
	7	16	83	09	MK	T0548	
	7	16	83	08	PK	T0541	
	7	16	83	10	GO	T0540	
<b>RSB-8A</b>	7	19	81	03	C	FPG-CY	For ROLAND FJ-540 / FJ-740K/Mimaki JV-22
	7	19	81	02	M	FPG-MG	
	7	19	81	01	Y	FPG-YE	
	7	19	81	06	LC	FPG-LC	
	7	19	81	05	LM	FPG-LM	
	7	19	81	12	R	FPG-OR	
	7	19	81	13	G	FPG-GR	
7	19	81	04	K	FPG-BK		

# Products List

## Item 14-- Textile ink

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
ET-3A	5	06	31	04	K	T0631/T0601/T0471/T0441	Epson Stylus C63/CX6300/C65/CX3500/CX6500/C64/C66/C84/C86/CX3400/CX6400/CX6600/C67/C87/CX3700/CX4700/CX4100/CX3810/CX4200/CX4800/CX5800F/CX7800/C88/CX3800/CX5700F
	5	06	31	03	C	T0632/T0602/T0472/T0442	
	5	06	31	02	M	T0633/T0603/T0473/T0443	
	5	06	31	01	Y	T0634/T0604/T0474/T0444	
ET-3B	5	06	32	04	K	T0711/T0691/T0731/T0921	For Epson Stylus Photo RX5900 Epson Stylus D92/D120/D78/D68/D88/CX5000/6000/7000F/CX5900/C79/C110/CX3900/C90/CX4300/CX5500,DX8400/DX8450
	5	06	32	03	C	T0712/T0692/T0732/T0922	
	5	06	32	02	M	T0713/T0693/T0733/T0923	
	5	06	32	01	Y	T0714/T0694/T0734/T0924	
ET-5A	5	06	51	04	K	T0481/T0491/T0821/T0811	For Epson stylus RX500/ R300/ R320/R300M/R200/RX600/RX620/R220/R340/ RX510/RX630/R310/R210/R230/R350/RX650/RX590/R260/R265/ R270/R390/R290
	5	06	51	03	C	T0482/T0492/T0822/T0812	
	5	06	51	02	M	T0483/T0493/T0823/T0813	
	5	06	51	01	Y	T0484/T0494/T0824/T0814	
	5	06	51	06	LC	T0485/T0495/T0825/T0815	
ET-5B	5	06	51	05	LM	T0486/T0496/T0826/T0816	T009 For Epson Photo 1290
	5	06	52	04	K		
	5	06	52	03	C		
	5	06	52	02	M		
	5	06	52	01	Y		
	5	06	52	06	LC		
ET-8A	5	16	81	09	MK	T5438	Epson stylus Pro 7600/9600/4000/9400
	5	16	81	03	C	T5432	
	5	16	81	02	M	T5433	
	5	16	81	01	Y	T5434	
	5	16	81	06	LC	T5435	
	5	16	81	05	LM	T5436	
	5	16	81	07	LK	T5437	
	5	16	81	08	PK	T5431	
ET-8B	5	16	82	03	C	T0542	Epson stylus Photo R800/R1800
	5	16	82	02	M	T0543	
	5	16	82	01	Y	T0544	
	5	16	82	23	B	T0549	
	5	16	82	12	R	T0547	
	5	16	82	09	MK	T0548	
	5	16	82	08	PK	T0541	
ET-8C	5	16	82	10	GO	T0540	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880
	5	16	83	03	C	T0592/T5642/T5622	
	5	16	83	02	M	T0593/T5643/T5623	
	5	16	83	01	Y	T0594/T5644/T5624	
	5	16	83	06	LC	T0595/T5645/T5625	
	5	16	83	05	LM	T0596/T5646/T5626	
	5	16	83	07	LK	T0597/T5647/T5627	
	5	16	83	08	PK	T0591/T5641/T5621	
	5	16	83	09	MK	T0598/T5438/T5668	
	5	16	83	11	LLK	T0599/T5649/T5629	

## Item 15--ART-PAPER Ink for Art paper/printing paper

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
EA-5A	2	11	51	03	C	T0481/T0491/T0821/T0811	For Epson stylus RX500/ R300/ R320/R300M/R200/RX600/RX620/R220/R340/ RX510/RX630/R310/R210/R230/R350/RX650/RX590/R260/R265/ R270/R390/R290
	2	11	51	02	M	T0482/T0492/T0822/T0812	
	2	11	51	01	Y	T0483/T0493/T0823/T0813	
	2	11	51	06	LC	T0484/T0494/T0824/T0814	
	2	11	51	05	LM	T0485/T0495/T0825/T0815	
	2	11	51	04	K	T0486/T0496/T0826/T0816	

# Products List

EA-8A	2	11	81	03	C	T0592/T5642/T5622	Epson Stylus Photo R2400/ Pro 4800/Pro 7800/Pro9800/7880C/4880/9880
	2	11	81	02	M	T0593/T5643/T5623	
	2	11	81	01	Y	T0594/T5644/T5624	
	2	11	81	06	LC	T0595/T5645/T5625	
	2	11	81	05	LM	T0596/T5646/T5626	
	2	11	81	07	LK	T0597/T5647/T5627	
	2	11	81	08	PK	T0591/T5641/T5621	
	2	11	81	09	MK	T0598/T5438/T5668	
	2	11	81	11	LLK	T0599/T5649/T5629	
EA-8B	2	11	82	03	C	T5432	Epson stylus Pro 7600/9600/4000/9400
	2	11	82	02	M	T5433	
	2	11	82	01	Y	T5434	
	2	11	82	06	LC	T5435	
	2	11	82	05	LM	T5436	
	2	11	82	07	LK	T5437	
	2	11	82	08	PK	T5431	
	2	11	82	09	MK	T5438	
EA-8C	2	11	83	03	C	T0542	Epson stylus Photo R800/R1800
	2	11	83	02	MK	T0543	
	2	11	83	01	Y	T0544	
	2	11	83	23	B	T0549	
	2	11	83	12	R	T0547	
	2	11	83	09	MK	T0548	
	2	11	83	08	PK	T0541	
	2	11	83	10	GO	T0540	

## Item 16--Cleaning Liquid

(Product Code)	Reorder No.				(Color)	Cartridge No.	For use on Printer model
CCL-0A	8	07	01	50	NON	For Canon /Hp/Lexmark Color Inkjet cartridge	Canon/Hp/Lexmark Inkjet (Dye ink )
ECL-0A	8	06	01	50	NON	For Epson Black & Color dye ink jet cartridge	Epson Inkjet printer( Dye ink)
ECL-0B	8	06	02	50	LC	For Epson Black & Color dye ink jet cartridge	Epson Inkjet printer( Dye ink)
UCL-0A	8	00	11	50	NON	For Epson/Canon/HP/Lexmark B&C inkjet cartridge	Epson/Canon/Hp/Lexmark Inkjet printers( Dye ink)
PCL-0A(普通)	9	00	01	50	NON	For Pigment/Sublimation base series	For Pigment /Sublimation/Textile Ink base series Recommend When change different type ink
PCL-0B(强效)	9	00	02	50	NON	For Pigment/Sublimation base series	For Pigment /Sublimation/Textile Ink base series
PCL-0C(中效)	9	00	03	50	NON	For Pigment/Sublimation base series	For Pigment /Sublimation/Textile Ink base series( for printerhead cleaing)